



Unplugging Model S from a J1772 Public Charging Station

The most convenient way to unplug Model S from a J1772 public charging station is to remove both the charging station handle and the Tesla J1772 adapter at the same time:

1. Ensure that Model S is unlocked.
2. Hold the public charging handle with one hand.
3. Hold the Tesla J1772 adapter with the other hand.



4. Press and hold the button on the public charging handle, then pull outward with both hands in order to remove the handle and adapter together.
5. Press and hold the button again to remove the adapter from the handle.

If the charging station handle separates from the adapter, Model S automatically locks the adapter in the charge port. To remove it, use the touchscreen to unlock the charge port.

